

Outdoor 3-Outlet Photocell Timer

Instruction Manual & Warranty

ELECTRICAL RATINGS: 15A, 125VAC, 60Hz, 1875W Tungsten

INSTALLATION:

1. Connect two pieces of yard stake together by screwing stake A into stake B (see illustration).
2. Attach yard stake to body by screwing top of stake B into base (see illustration). Be sure to firmly tighten stake to body before installing into ground.
3. Insert stake 6 inches into ground.

OPERATION:

1. Once assembled, plug yard stake into a grounded outlet (total wattage should not exceed 15Amp or 1800 Watts tungsten).
2. Lift rain cover and rotate dial clockwise to desired setting (see table below). Once you've set the timer, securely close rain cover.

SELECT	DESCRIPTION
OFF	Power off
ON	Power on
DUSK- DAWN	On at dusk, off at dawn
2 Hrs	On at dusk, On for 2 hours, then Off
4 Hrs	On at dusk, On for 4 hours, then Off
6 Hrs	On at dusk, On for 6 hours, then Off
8 Hrs	On at dusk, On for 8 hours, then Off

CAUTION:

- Risk of Fire. Not for permanent installation. Use only with outdoor equipment, Christmas-tree, or other seasonal decorative-lighting products having a total of 12 Amp maximum. Do not install or use this product for more than a 90-days period.
- If using Christmas tree or decorative lighting products that are not marked with an amp rating, connect no more than 140 screw-base lamps (C7 or C9) or 12 strings with push-in lamps to this cordset.
- Cordset should be plugged into a GFCI-protected receptacle.
- If using an outdoor-use cord set for an extended period of time (greater than 90 days) consider hard wiring a permanent outdoor-use receptacle rated for year-round use in the area power is needed. Contact a licensed electrician for proper installation of permanent wiring.
- After installation, connector must be kept a minimum of 6 inches above ground.

WARNING:

Modifications not approved by the party responsible for compliance will void user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will occur in a particular installation.

If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user should try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
4. Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. "Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation"

NOTE:

Position yard stake away from other light sources. If it is too close to other light sources, or if the photocell is facing a light source other than the sun (such as a porch light or street lamp), the yard stake may shut off outside of the timer setting you chose. If this happens, relocate yard stake or eliminate other light sources. Keep yard stake and power cord out of common walkways to prevent tripping.

Limited One Year Warranty


AmerTac™ warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective unit and are effective only if such units are returned within one year of the purchase date to AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. Warranty void if damage is due to misuse or improper installation. In no circumstance will AmerTac be liable for consequential or incidental damages relating in any way to this product.

Garantie limitée de un an

AmerTac™ garantit ce produit contre tout défaut de matériaux et de main d'œuvre pendant une période de un (1) an à partir de la date d'achat. Les obligations d'AmerTac se limitent à la réparation ou au remplacement de tout article défectueux et s'appliquent seulement si l'article est retourné dans l'année de la date d'achat à AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. AmerTac ne peut en aucun cas être tenue responsable pour des dommages consécutifs ou accessoires liés de quelque manière que ce soit à ce produit.

Garantía limitada de un año

AmerTac™ garantiza que este producto está libre de defectos de material y mano de obra por un período de un año a partir de la fecha de compra. Las obligaciones de AmerTac se limitan a reparar o cambiar la unidad defectuosa y son efectivas sólo si se devuelve en un lapso de un año a partir de la fecha de compra a AmerTac, 250 Boulder Drive, Breinigsville, PA 18031. La garantía no será válida si el daño es causado por mal uso o instalación inadecuada. En ningún caso AmerTac será responsable por daños consecuentes o incidentales relacionados en cualquier forma con este producto.

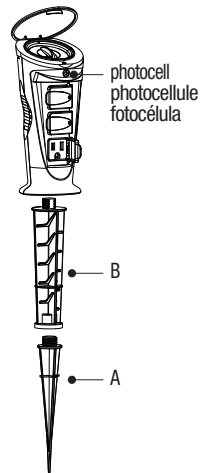

Questions?, ¿Preguntas? 201.934.3224

©2011 AmerTac™
250 Boulder Drive
Breinigsville, PA 18031
www.amertac.com
Made in China
Hecho en China
Fabriqué en Chine

Conforms to UL Std. No. 1363 and 498
Certified to CSA Std. C22.2 No. 21 and 42