




# Assembly Instructions

For Item #'s: PHF11 & PHF22

## Plastic Hanging Feeder


### Step 1

Your feeder should arrive complete with a red base, a white tube and a poly bag containing the axle rod assembly.

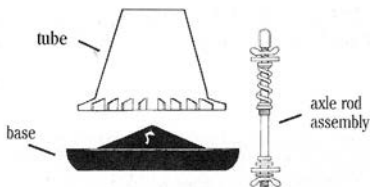

### Step 2

Open the poly bag. Unthread the parts shown and set aside.

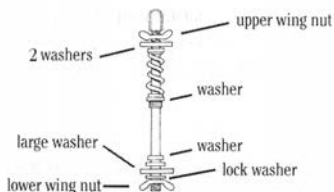

### Step 3

Slide axle rod assembly (spring side up) through the small hole in the base of the feeder.




### Step 4

Attach the large washer, lock washer, and lower wing nut to the underside of the base as shown. Next, thread the wing nut to secure the parts.




### Step 5

Place the white tube over the axle rod assembly. Slide the axle assembly through the small hole at the top of the tube.

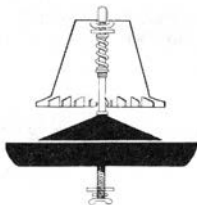

### Step 6

Attach the washer and upper wing nut as shown (you may need to apply some pressure to compress the spring). Twist the wing nut to tighten the entire assembly.

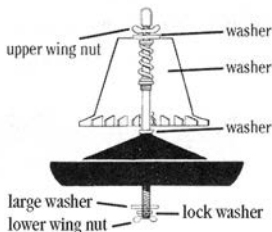

**Adjusting the feed level:**  
Twist the top wing nut to control the level of feed release into the base.



# Assembly Instructions


For Item #: PHF3

## Plastic Hanging Feeder

---


### Step 1

Your feeder should arrive complete with a red base, a white tube and a poly bag containing the axle rod assembly.

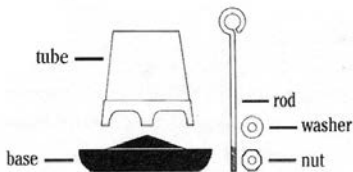

### Step 2

Place the washer on the rod, then place the rod through the tube and the base.

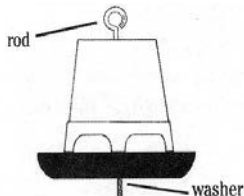

### Step 3

Screw the nut on the end of the rod to secure the tube to the base.

