CONAIR®

21 PIECE

Haircut kit

Instructions for Care and Use

MODEL HC200ACS

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER- any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Unplug this appliance before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Always unplug this appliance from electrical outlet immediately after using.

DO NOT REACH INTO THE WATER

WARNING- To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. Never operate this appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See "Care of your Clippers")
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocks or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF" then remove plug from outlet.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current 60 hertz only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.

Your new Conair® haircut kit has everything you need to achieve professional haircuts at home. It features a powerful clipper with adjustable taper control and high carbon steel blades for cutting precision. Also included are 9 attachment combs (1/8", 1/4", 3/8", 1/2", 5/8", 3/4"*", 7/8" for different hair lengths, left and right ear combs), barber scissors, 1 styling comb with angled teeth, barber cape, storage case, a barber comb with straight teeth, and 2 styling clips to assist you in cutting longer hair styles. A 28 minute step-by-step How-to DVD filled with styling tips and techniques. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance of the clipper blades.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running smoothly.
2. Place a towel around the neck of the person.
3. Seat the person so that his or her head is at your eye level.This gives you greater visibility and control.
4. First, comb hair until it's tangle-free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short attachment comb (number 1) cuts hair to 1/8".
- Medium-Short attachment comb (number 2) cuts hair to 1/4".
- Medium-Long attachment comb (number 3) cuts hair to 3/8".
- Long attachment comb (number 4) cuts hair to 1/2".
- Long attachment comb (number 5) cuts hair to 5/8"
- Long attachment comb (number 6) cuts hair to 3/4"
- Long attachment comb (number 7) cuts hair to 7/8"
- Left ear attachment comb lightly tapers over left ear.
- Right ear attachment comb lightly tapers over right ear.



Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.



To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed in its natural direction.
2. Using the largest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

A) Apply more pressure to the head with the attachment comb that is in place. This takes a little practice, of course. **OR**

B) Just switch to a shorter attachment comb.

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length.Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

OUTLINING:

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see below), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see above) and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do: comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flat top, use the flat comb, not the attachment comb. Just cut hair on top of the head over flat comb. (see above).

To taper hair down to the neckline, use attachment comb #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").

USER-MAINTENANCE INSTRUCTIONS

CARE OF YOUR CLIPPERS

IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:

Conair® hair clippers are carefully inspected to insure that the blades are in perfect alignment. Of course you will need to realign the blades after removal for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if blades need realigning? Simply match them up, point for point, to conform with FIG. 1 below:



FIG. 1

To prevent the clipper from contacting the skin or cutting too closely, make certain that the end top blade teeth are 1/32" to 1/16" back from bottom blade.

To Align Blades:

1. Add two or three drops of Conair Lubricating Oil (included).
2. Turn clipper on for a minute to disperse oil evenly over blades, then turn off.

FIG. 2

3. Unplug clipper and slightly loosen screws. (See FIG. 2)
4. Position the extreme left-hand tooth of the top blade so that it either covers or appears on the left of the first small tooth on the bottom blade.
5. Make sure that the big tooth on the bottom blade touches the extreme right hand tooth of the top blade.

SPECIAL OIL

To maintain the blades of your Conair clipper, oil them after every three or four haircuts. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was formulated specifically for the Conair high-speed clipper. Because it is the right oil to use, it will not slow down the blades. Never use any other product. There is no substitute for Conair oil.



CONAIR®

21 PIEZAS

Conjunto de Peluquería

Instrucciones de uso y de mantenimiento

MODELO HC200ACS

MEDIDAS DE SEGURIDAD IMPORTANTES

Cuando se usan aparatos eléctricos, especialmente en la presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTENGA EL APARATO ALEJADO DEL AGUA

PELIGRO- Cualquier electrodoméstico permanece eléctricamente activo, incluso cuando se interrumpe esta apagado. Para reducir el riesgo de muerte o lesión por descarga:

1. Desconecte el aparato antes de limpiarlo.
2. No coloque el aparato en ningún lugar o lo deje caer o ser empujado a una bañera o un lavabo.
3. No lo use mientras se está bañando o duchando.
4. No coloque el aparato en ningún recipiente o otro líquido.
5. No intente de alcanzar un aparato que ha caído al agua. Desenchúfelo inmediatamente.
6. Siempre desconecte el aparato inmediatamente después de usarlo.

NO TRATE DE ALCANZAR LA UNIDAD EN EL AGUA

7. No coloque el aparato en una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
11. Siempre conecte el aparato a la toma de enchufe. Para desconectarlo, coloque todos los ajustes en la posición "Apagado", luego desenchúfe la cable.

ADVERTENCIA-

Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:

1. Nunca deje este aparato desatendido cuando está conectado. No jale, tiere o enrolle el cable alrededor del aparato.
2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad
3. Use este aparato únicamente con el propósito para el cual fue diseñado y tal como se describe en este manual. Solo use accesorios recomendados por el fabricante.
4. Nunca utilice el aparato si el cable o el enchufe están dañados, si no funciona correctamente, si ha caído, si está dañado o si ha caído al agua. Llévelo a un centro de servicio autorizado para que lo examinen y lo reparen.
5. Manténgala el cable alejado de superficies calientes
6. Nunca deje caer ni inserte un objeto en ninguna de las aberturas
7. No coloque el aparato en ninguna superficie mientras este funcionando
8. No use este aparato con un peine accesorio roto o ladeado o si le faltan dientes a la cuchilla. Esto podría provocar una herida. Asegúrese que las cuchillas estén correctamente alineadas antes de usarlo (véase el sección "Instrucciones de mantenimiento")
9. No utilice este aparato al aire libre, ni donde se están usando productos en aerosol (spray) o donde se está administrando oxígeno
10. Nunca bloquee las aberturas de aire o coloque el aparato en una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
11. Siempre conecte el aparato a la toma de enchufe. Para desconectarlo, coloque todos los ajustes en la posición "Apagado", luego desenchúfe la cable.

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE USO

1. Inspeccione el aparato para asegurarse que este libre de cabello y polvo, que esté bien cerrado y que funcione correctamente.
2. Coloque una toalla o una capa de barbero alrededor del cuello de la persona a quien le va a cortar el cabello.
3. Siente a la persona de manera que quede sentada en el nivel de sus ojos para mayor visibilidad y control.
4. Desenrolle el cable, luego coja la cortadora controlándola en su mano. Ya está listo para empezar.

CORTES MEDIANOS A LARGOS

Empiece por cortar poco cabello, hasta asegurarse de cómo se comporta el cabello. Use el peine accesorio más largo para empezar, luego use peines accesorios más cortos para acortar el cabello.

- El peine accesorio corto (No.1) corta el cabello a 1/8".
- El peine accesorio mediano-corto (No.2) corta el cabello a 1/4" (6 mm)
- El peine accesorio mediano-largo (No.3) corta el cabello a 3/8" (9 mm)
- El peine accesorio largo (No.4) corta el cabello a 1/2" (13 mm)
- El peine accesorio largo (No.5) corta el cabello a 5/8" (16 mm)
- El peine accesorio largo (No.6) corta el cabello a 3/4" (19 mm)
- El peine accesorio largo (No.7) corta el cabello a 7/8" (22 mm)
- El peine accesorio largo corta el cabello a 1" (25 mm)

Empezar el corte de cabello:

1. Peine el cabello en la dirección de su crecimiento natural
2. Empiece el recorte a un lado de la cabeza, usando el peine accesorio más largo. Sostenga la cortadora ligeramente contra el cabello con un ángulo de 45 grados. Coloque la cortadora contra el cabello hacia arriba. Sostenga la cortadora y mueva la cortadora lentamente en el espacio entre sus cuerpos para peinar con frescura y corte el cabello cabeza a poco, incluiendo el cabello o el peine y la cabeza y corte el cabello hasta siempre de adelante para atrás de la cabeza y corte el cabello corta a lo largo deseado. Trabaje siempre de atrás para lavarlar el cabello y para lavarlar o sus dedos barbero o sus dedos cabeza, use el peine de más largo encima de la cabeza y vengan los resultados mejores.

Si quiere dejar el cabello más corto, Reduzca el principio un poco en el peine accesorio por uno más corto. Reduzca el principio que es mejor dejar dematasado cabello que muy poco.

Para quitar el peine accesorio, coloque los dedos índice y pulgar, tal como se en la ilustración, y jale y peine hacia arriba y afuera.

- El peine accesorio para la oreja izquierda corta la oreja izquierda
- El peine accesorio para la oreja derecha corta la oreja derecha

Siempre corte el cabello desde la parte trasera para asegurarse que las cuchillas estén alineadas nuevamente después de extraerlas para limpiarlas o reemplazarlas o si se desalinearan por un golpe. Para determinar si las cuchillas necesitan alinearse de nuevo, simplemente fíjalas coincidir como lo indican la figura que se encuentra a continuación.



FIG. 1

Para evitar que la cortadora corte el pelo demasiado corto o que las cuchillas toquen la piel, asegúrese que la parte superior de la cuchilla grande esté a una distancia de 0.08 cm a 0.16 cm de la cuchilla pequeña.

Alineación de las cuchillas:

1. Coloque 2-3 gotas de aceite lubricante (incluido) sobre las cuchillas
2. Enciende el aparato durante un minuto para repartir el aceite, luego apáguelo
3. Desenchúfe el aparato en la cortadora de Conair® son inspeccionadas para asegurarse que las cuchillas están alineadas nuevamente después de extraerlas para limpiarlas o reemplazarlas o si se desalinearan por un golpe. Para determinar si las cuchillas necesitan alinearse de nuevo, simplemente fíjalas coincidir como lo indican la figura que se encuentra a continuación.
4. Asegúrese de que la extremidad derecha de la cuchilla pequeña toque el diente de la extremidad derecha de la cuchilla grande
5. Alinee la cuchilla grande con los dos orificios para tornillos, luego tegnes los dos tornillos originales, apretándolos ligeramente con un destornillador Phillips.

ACEITE ESPECIAL

Para mantener las cuchillas de su cortadora en condición óptima, lubríquelas después de tres o cuatro cortes de cabello, aplicando unas cuantas gotas de aceite lubricante en los dientes de las cuchillas. Encienda la cortadora durante un minuto, luego apáguela. El aceite lubricante ha específicamente diseñado para las cortadoras de alta velocidad de Conair®. Porque es el aceite adecuado, no reducirá la velocidad de las cuchillas. Nunca use otro aceite para lubricar su aparato. No hay ningún substituto al aceite de Conair.



INSTRUCCIONES DE MANTENIMIENTO

ALINEACIÓN DE LAS CUCHILLAS

MANTENIMIENTO DE LAS CUCHILLAS:

Las cortadoras de Conair® son inspeccionadas para asegurarse que las cuchillas están alineadas nuevamente después de extraerlas para limpiarlas o reemplazarlas o si se desalinearan por un golpe. Para determinar si las cuchillas necesitan alinearse de nuevo, simplemente fíjalas coincidir como lo indican la figura que se encuentra a continuación.

NOTA: Nunca emplip la cortadora para que corte más pigdamente. La expponenta prolongará su vida útil.

PERFECTOS CORTES CON CORONILLAS PLANAS, CORTES MILITARES ETC.

Siempre corte el cabello desde la parte trasera para los lados, cortando desde abajo hasta la parte superior lateral de la cabeza.

CONTORNEO:

El contorneo no incluye accesorios. Peine el cabello en el sitio deseado. Coloque la cortadora entre las patillas y la oreja (véase el dibujo) y asegurese que la esquina de la cuchilla se encuentre contra el nacimiento del pelo. Mueva la cortadora lentamente sobre alrededor de la oreja, cortando un poco cada vez. Repita el proceso del lado opuesto. Para cortar el pelo en la nuca y las patillas, sostenga la cortadora y mueva la cabeza hacia abajo.

ADJUSTABLE TAPER LEVER

Just like professional clippers, the Conair taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time...while you're clipping.

This taper lever eliminates the need for an attachment comb because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper lever up as far as it will go. To increase cutting length, slowly push lever down. If you push to the lowest position, it will leave hair about the same length as the short attachment.

Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades.

Packed-in hair can slow down any clipper. To remove hair without removing the blades, do what professionals do: keeping the clipper on, quickly push the taper lever back and forth from "closer" to "longer" cut a few times.

If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair.



If clipper stops cutting and this action doesn't help, check the blades. If they become dull, replace them or return them to a Conair service center. We'll be glad to sharpen them for you. For new blades, send check or money order for $6.50 (see order blank) which includes postage and handling(if $10 minimum is met) to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. Lay it flat with the cord coiled up when not in use.

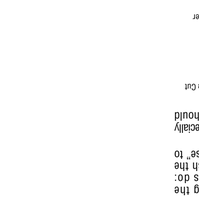

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. Yet did you know that an electric appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Pellon Service is from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

LIMITED FIVE YEAR WARRANTY

Once again, thanks for buying a Conair product.

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and $3.00 for postage and handling. California residents only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

Attachment combs should also be replaced if they are lost or broken. It is easier to cut hair with the accuracy of a razor when the necessary tools are at your fingertips.

Conair makes a variety of accessories for different haircut kits. If your haircut kit does not include them, you may want to consider adding them in your professional haircutting tools.

Left and right ear attachment combs provide effortless precise cutting around the ears. Styling clips hold hair in place when you are sectioning hair. A styling comb makes it easy to taper or cut hair at an angle. A barber cape ensures a comfortable and neat haircut and a convenient storage pouch keeps all your essentials in one place.

Last but not least, an easy-to-follow 30-minute "Haircuts at Home" video is available. It demonstrates basic haircutting techniques and follows sort popular haircuts step by step. It will give you the confidence and instruction you need to give great looking haircuts to every member of your family.

IB-7265

Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

© 2006 CONAIR CORPORATION

SERVICE CENTER

WARRANTY

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

NOVEDADES FASCINANTES DE CONAIR

PT1 Conjunto de Peluquería de 15 piezas

Esta cortadora pequeña y ligera con un motor de CD potente es una herramienta versátil que también se puede usar para los recortes de detalle y el bikini.

HC90 Conjunto de Peluquería de 10 piezas

Cortadora potente con motor magnético, cuchillas de acero inoxidable y 4 peines accesorios.

MN253 Cortadora Cobra

Cortadora de detalle de lujo con 3 cabezas intercambiables: cortadora, rasaradora, cortadora para el pelo de la nariz y de los oídos.
* No se recomienda para las barbas gruesas.

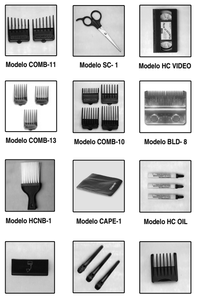

EXCITING ITEMS FROM CONAIR

PT1 Mighty Mini 15 Piece Clipper Kit

Powerful DC motor makes this unique, lightweight clipper / trimmer a versatile cutting instrument for detailing and bikini line trimming.

Attachment combs should be replaced if they are lost or broken. It is easier to cut hair with the accuracy of a razor when the necessary tools are at your fingertips.

Conair makes a variety of accessories for different haircut kits. If your haircut kit does not include them, you may want to consider adding them in your professional haircutting tools.

Left and right ear attachment combs provide effortless precise cutting around the ears. Styling clips hold hair in place when you are sectioning hair. A styling comb makes it easy to taper or cut hair at an angle. A barber cape ensures a comfortable and neat haircut and a convenient storage pouch keeps all your essentials in one place.

Last but not least, an easy-to-follow 30-minute "Haircuts at Home" video is available. It demonstrates basic haircutting techniques and follows sort popular haircuts step by step. It will give you the confidence and instruction you need to give great looking haircuts to every member of your family.

IB-7265

HC90 10 Piece Haircut Kit

Powerful magnetic motor clipper with stainless steel blades and 4 attachment combs.

MN253 Cobra Trimmer

3-in-1 Deluxe, rechargeable detailer. 3 interchangeable heads include a full size trimmer. Shaver and nose and ear attachment for all facial fashions. *Not recommended for thick beards.

HARDCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2006. Orders postmarked after this date will be accepted, and the customer will be notified of pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Set of 2 Attachment Combs: 1/8", 1/4", 3/8", 1/2", HC100, HC318, HC414, HC275, HC222)	**COMB-10**	$5.00		
Set of 2 Attachment Combs: left and right ear. Fits all clippers (see COMB-10) except HC222	**COMB-11**	$1.75		
1" Comb fits all clippers	**COMB-12**	$1.75		
3 attachment combs 5/8", 3/4", 7/8". Fits all clippers	**COMB-13**	$5.00		
Neck Brush	**HCNB-1**	$1.50		
Deluxe Black Vinyl Cape with Velcro Collar	**CAPE-1**	$5.00		
Lubricating Oil (pkg. of 3 tubes)	**HC OIL**	$2.00		
30 Minute Haircut Video	**HC VIDEO**	$8.95		
Barber Scissors	**SC-1**	$2.00		
Blade Set for HC200 Detail Clipper	**BLD-8**	$6.50		
Blade Guard	**HC-1**	$1.00		
Styling Clips (set of 3)	**CLP-1**	$1.50		
			Subtotal	
			***Sales Tax**	
			TOTAL	

Mail for:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

CUT HERE

Enclose check or money order made payable to Conair (We cannot accept cash). Sample or C.O.D. orders. PO & APO addresses are not acceptable. Please allow 6-8 weeks for delivery. Prices are subject to change without notice. Please see our pricing for shipments outside the continental United States.

All prices include handling and return postage. *Please use student to complete without notice.*

To avoid delays, please print clearly.

We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____

ADDRESS _____ APT _____

CITY _____ STATE _____ ZIP _____

TELEPHONE ( ) _____ *(We call only if we have a question about your order.)*

For information on other Conair® Hardcut kit parts call: 1-800-3-CONAIR.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE, SE EQUIVOCA

MANTENGA ESTE APARATO ALEJADO DEL AGUA

Todos saben que la combinación de electricidad y de agua es peligrosa. Pero ¿Sabe usted que un aparato eléctrico está eléctricamente activo aún cuando el interruptor está apagado? Si el enchufe está conectado, el aparato está encendido. De modo que cuando no use sus aparatos electrodomésticos, manténgalos desenchufados.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Un Aviso Público de la Asociación de los Fabricantes de Electrodomésticos y de Underwriters Laboratories, Inc.

GARANTÍA LIMITADA POR CINCO AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio más cercano, junto con su recibo de compra y un cheque de $3.00US por gastos de envío y manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLICITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CENTROS DE SERVICIO:

© 2006 CONAIR CORPORATION

Service Department	Service Department
150 Milford Road	7475 North Glen Harbor Blvd.
East Windsor, NJ 08520	Glendale, AZ 85307

IB-7265

Nuevamente, gracias por comprar un producto de Conair.

Las cuchillas de su cortadora son de acero duro inoxidable, y fueron diseñadas para brindar resultados precisos y profesionales. Si siente que las hojas tironean o enganchan el pelo, significa que están perdiendo el filo y debe reemplazarlas lo más pronto posible. También se deben cambiar los peines accesorios si se pierden o se dañan. Es más fácil cortar el pelo con exactitud profesional cuando se tienen las herramientas adecuadas. Conair también fabrica una variedad de accesorios para cortar el cabello. Si su conjunto para recorte no los incluye, los puede ordenar por separado.
Peines para recortar el cabello alrededor de la oreja izquierda y derecha brindan un corte de precisión sin esfuerzo. Los clips sostienen el cabello mientras lo está seccionando. El peine de modelar permite contornear o cortar el cabello en ángulo. La capa de peluquero asegura un corte confortable y limpio y el cómodo bolso de almacenamiento mantiene todo sus accesorios en el mismo lugar.
También puede ordenar el video de 30 minutos "Corte de cabello en casa" con instrucciones fáciles de seguir. El video muestra las técnicas básicas del corte de cabello y presenta cuatro atractivos cortes paso a paso. Le dará la confianza y los conocimientos que necesita para cortar el cabello a todos los miembros de la familia.

PALANCA REGULADORA AJUSTABLE

Al igual que las cortadoras profesionales, su cortadora tiene una palanca reguladora ajustable al nivel de su dedo pulgar, para que pueda controlar el tamaño del cortado a medida que corta el cabello.

La palanca reguladora le permite cortar el cabello más corto o más largo, sin que tenga que usar un peine accesorio. Para un corte más corto, empuje la palanca hacia arriba. Para un corte más largo, empuje la palanca lentamente hacia abajo. El ajuste más corto dejará el cabello tan corto como el peine accesorio corto No.1.

Usar la palanca reguladora ajustable prolonga la vida útil de las cuchillas, puesto que nunca usan el mismo ángulo para cortar.



Su cortadora puede perder velocidad si recortes de cabello están trabados en las cuchillas. Use el cepillo de limpieza después de cada uso para limpiar las cuchillas sin removerlas, luego lubrique las cuchillas. Hacer esto después de cada uso, especialmente cuando se corta mucho cabello, mantendrá las cuchillas en condición óptima. Si la cortadora deje de funcionar, y que esto no solucione el problema, inspeccione las cuchillas. Cámbielas si estén embotadas. Puede pedir nuevas cuchillas por correo, mandando un cheque o un giro postal de $6.50US a la dirección más abajo. El pedido mínimo es de $10.00US.

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

NOTA: Nunca jale, tuerce o enrolle el cable alrededor del aparato. Cuando no use el aparato, deje el cable libre al lado del aparato.

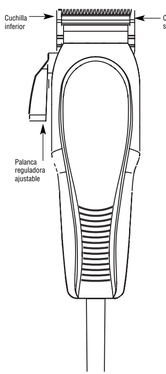

CUT HERE

FORMULARIO DE PEDIDO PARA PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 1ero de junio del 2008. Aceptaremos los pedidos después de esa fecha y notificaremos los clientes si los precios han cambiado.

DESCRIPCIÓN	NÚMERO	PRECIO	CANTIDAD	TOTAL
4 peines accesorios (3 mm, 6 mm, 9 mm, 13 mm) para los modelos HC200, HC220, HC240, HC102, HC300, HC318, HC414, HC275, HC222	**COMB-10**	$5.00		
2 peines accesorio (oreja izquierda y derecha) para todos los modelos, excepto HC222	**COMB-11**	$1.75		
1" peine accesorio (25 mm) para todos los modelos	**COMB-12**	$1.75		
3 peines accesorio (16 mm, 19 mm, 22 mm) para todos los modelos	**COMB-13**	$5.00		
Cepillo para el cuello	**HCNB-1**	$1.50		
Capa de vinilo blanco con velcro	**CAPE-1**	$5.00		
Aceite lubricante (envase de 3)	**HC OIL**	$2.00		
Video instructivo de 28 minutos en ingles o en español (opcional)	**HC VIDEO**	$8.95		
Tijeras de peluquero	**SC-1**	$2.00		
Conjunto de cuchillas para el modelo HC200	**BLD-8**	$6.50		
Cubierta protectora para las cuchillas	**HC-1**	$1.00		
Clips de modelado (envase de 3)	**CLP-1**	$1.50		
		Subtotal		
		Impuestos a la venta*		
		TOTAL		

Incluya un cheque o giro postal a la orden de Conair (no podemos aceptar dinero en efectivo, estampillas, ni pedidos con pago con entrega). Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas que corresponda. Pedido mínimo de $10.00US o de lo contrario se sumará al pedido $2.00US por gastos administrativos.
Todos los precios incluyen gastos administrativos y franqueo de envío. *Los precios están sujetos a cambio sin previo aviso. Estos precios son válidos únicamente para los envíos en la parte continental de los Estados Unidos.* ***La entrega demora entre 4 y 6 semanas.delivery.***

Para evitar demoras, por favor escriba claramente.
Necesitamos una dirección completa ya que US no puede hacer entregas en casillas postales.

NOMBRE _____

DIRECCIÓN _____ DPTO. _____

CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____

TELÉFONO ( ) _____ (sólo le llamaremos si tengamos alguna pregunta sobre su pedido)

Para información sobre otras partes de los conjuntos de Conair®, llame 1-800-3-CONAIR

Enviara:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730