

### FELT

### Nail-On Weatherseal

#### Installation:





1. Unwind a length of felt.
2. Nail, staple or tack in place at the starting point.
3. Pull taut and continue to nail or staple, spacing about 4 inches apart.
4. Cut to required length.

#### Windows:

1. Apply to frame above upper window.
2. Apply to sill below lower window.
3. Apply across lock rail.
4. On the sides, apply to frame with felt pressed against window.

#### Doors:

1. Apply to doorstop moulding across top and down latch side.
2. On hinge side, apply to door frame next to moulding.

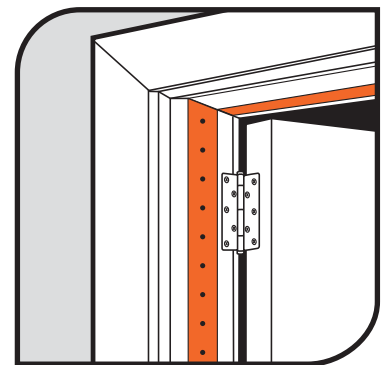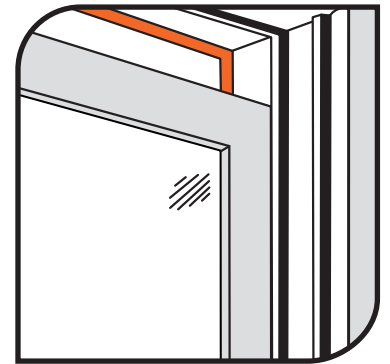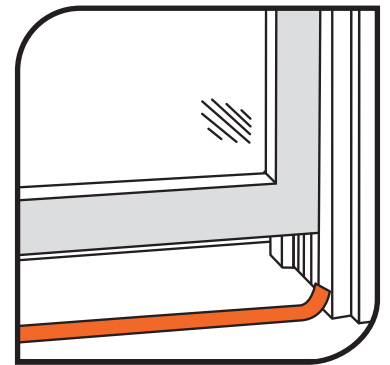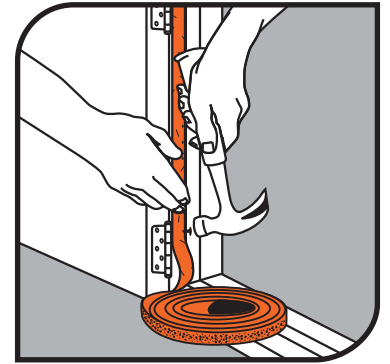

### Burlete de FIELTRO

### Instala clavando

#### Instalación:

1. Desenvuelva una tira de fieltro.
2. Clave, grape o tache en su lugar a la punta de partida.
3. Jale tensa y continúe clavando o grapando, separando las tachuelas o clavos aprox. 4 pulgadas.
4. Corte al largo adecuado.

#### Ventanas:

1. Aplique al marco sobre la ventana superior.
2. Aplique al antepecho bajo la ventana inferior.
3. Aplique a la riel de la ventana superior.
4. En los lados, aplique con el fieltro presionando contra la ventana.

#### Puertas:

1. Aplique a la moldura superior y el lado de herraje.
2. En el lado de los goznes, póngalo en el marco de la puerta cerca de la moldura.

