


## MOUNTING INSTRUCTIONS

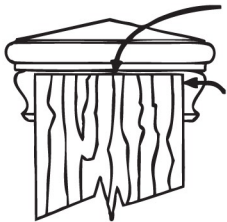

Attach here with  
construction adhesive  
OR  
Drill pilot holes and  
nail through molding.

## FINISHING INSTRUCTIONS

Wood expands and contracts across the grain. To reduce this naturally occurring tendency and prevent potential problems finish your post caps prior to installation.

### Stain Finishing:

Immerse cap in quality exterior penetrating oil such as Penofin or Cabot's Australian Timber Oil. It is necessary to finish both inside and outside of the cap. Follow coating manufacturer's directions.

### Paint Finishing:

Prime inside and outside of cap with alkyd oil base primer or stain blocking acrylic primer. Finish cap with exterior alkyd oil or acrylic house paint; two final coats is best.